

WARRANTY

Instruction Manual

1. During the warranty period, if the lamps and lanterns have quality problems, we will provide 1 year replacement 5 years warranty replacement service.
2. During the warranty period, the customer shall return damaged goods or faulty parts to the Company for inspection and repair. The Company will then return the repaired or new parts.
3. Warranty documents need to be presented and we will provide a replacement warranty.
4. The replacement warranty will not be accepted if.
 - ① Causing damage to the luminaire, including, but not limited to, abnormal operating conditions, improper use, and storage not in accordance with the instruction manual;
 - ② Disassembling, modifying, or improperly installing or repairing the product without our authorization;
 - ③ There is no warranty document;
 - ④ Damage caused by environmental factors, including, but not limited to, fire, flood, lightning strike, and earthquake.

Warning

To avoid the risk of fire, explosion or electric shock:

This product should only be installed, inspected and maintained by a qualified electrician in accordance with all applicable electrical codes.

- * Verify that the power cord is properly wired, following applicable electrical codes.
- * The light source contained in this luminaire may only be replaced by the manufacturer or its service agent or similarly qualified personnel
- * The external flexible cable or cord of this luminaire is not replaceable; if the cord is damaged, the luminaire should be destroyed

To avoid electric shocks:

- *Ensure power is turned off before and during installation and maintenance.
- *Luminaires must be powered by a wiring system that complies with local codes and is equipped with an equipment grounding conductor.

To avoid burning your hands:


- * Ensure that the fixtures are cooled for 30 minutes after power is removed before performing maintenance.

To avoid product aging:


- *Do not operate at ambient temperatures higher than those indicated on the luminaire data sheet.
- *Use the correct power cord as specified on the fixture data sheet.
- * Avoid use in environments containing sulfur, chlorine or other halides, methyl or ethyl acetate, cyanoacrylates, glycol ethers, formaldehyde or butadiene.
- * Installation of luminaires not less than 92cm from the ceiling.
- *Make sure that the power supply voltage is within the voltage range specified in the specifications.
- *Use only our replacement parts.
- *It is recommended to install the cable only in a dry location.
- *Install fixtures using only our or equivalent parts.

Bracket Mounting:


Using the mounting bracket holes as a reference, mark and drill holes in the ceiling or other carrier that holds the fixture.

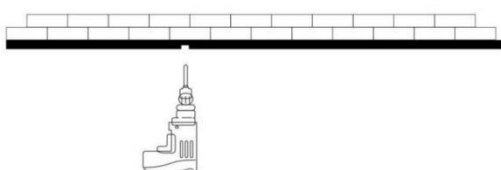

Secure the fixture with the bracket installed to the mounting surface with bolts and nuts.

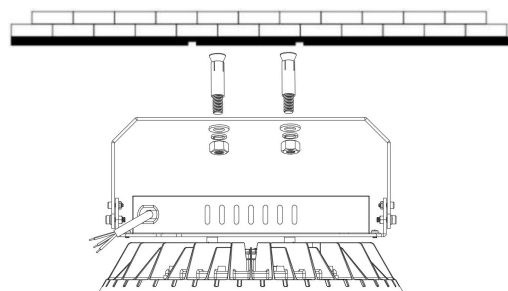


If the lamps need to be installed at an angle, simply loosen some of the mounting bracket adjustment screws and tighten them again after adjusting the angle.

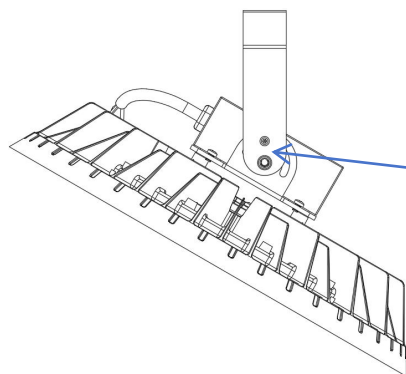

Bracket Adjustment Screws


50-300W

400-500W

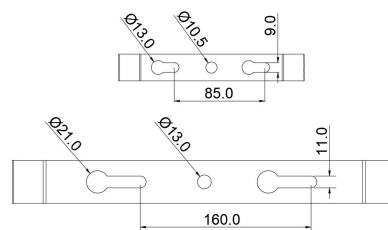

Bracket mounting holes: unit mm

Refer to the wiring diagram for electrical connections and insulate and waterproof.

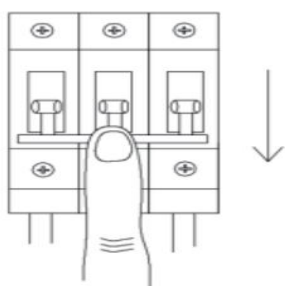


Please turn off the power

CE



 UL



DIM

