 


Sensor installation



Rotate



Remove



Connect

Sensor must be screwed
very tightly before use



Sensor



Remote Control